


Ver 03 - PALS B 22.07.21

SMOOTH-BASE

2 PART FAST SETTING FLOOR LEVELLING COMPOUND

- MOISTURE RESISTANT UNDERLAYMENT FOR HEAVILY TRAFFICKED LOCATIONS
- FAST SETTING & HIGHLY FLEXIBLE FOR INTERIOR & EXTERIOR USE
- CAN BE LAID FROM 2-25MM BED DEPTH IN A SINGLE POUR
- IDEAL FOR USE WITH UNDERFLOOR HEATING SYSTEMS
- RECEIVES TILES AFTER 4 HOURS VINYL COVERINGS AFTER 24 HOURS

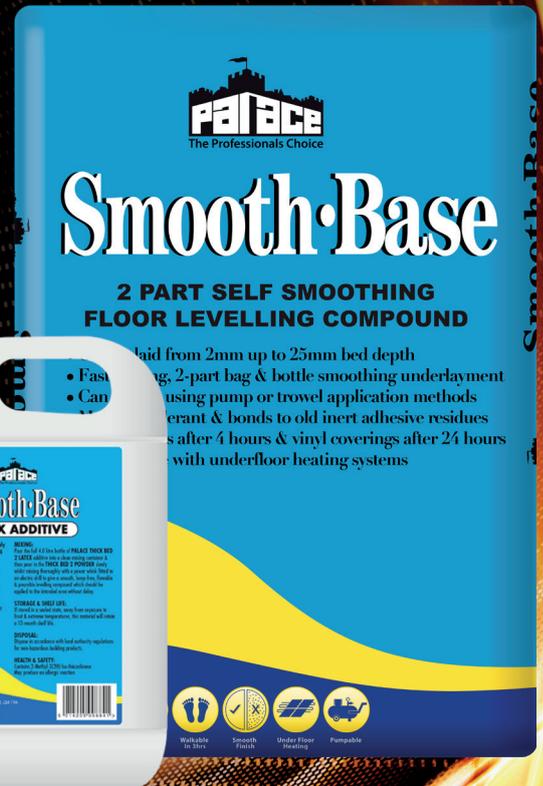

TECHNICAL SUMMARY

UNIT SIZES	20kg with 5 litres of latex additive
COLOURS	Dries Clear
FOOT TRAFFIC	180 minutes
READY FOR FLOOR COVERINGS	4 hours for a 3mm layer
WORKING TIME @ 20°C	20 - 30 min
INITIAL SET TIME @ 20°C	60 minutes
APPLICATION TEMPERATURES	>5°C and <35°C

* More information can be found within data sheet

PALACE SMOOTH BASE

Is a 2-part, cement-based sub-floor smoothing underlayment, giving a consistently level screed from 2mm up to 25mm in one single application and is then able to receive foot traffic after 3 hours. It is particularly recommended for heavily trafficked areas and also where heated sub-floors are to be installed.

SMOOTH FINISH

PROVIDES EXCELLENT BOND STRENGTH

SMOOTH-BASE

2 Part Fast Setting Floor Levelling Compound



DESCRIPTION

PALACE SMOOTH-BASE incorporates specially blended cements, graded sands, anti-shrink agents and is designed to be mixed only with **PALACE SMOOTH-BASE** liquid polymer additive which provides excellent bond strength onto many substrates as well as a smooth & highly resilient finish over a broad range of typically encountered floor surfaces. Anhydrite Screeds* can be over-laid when sealed, flooring grade Plywood, Cement Backer boards, existing tiles and similar dense impermeable surfaces. It is particularly recommended for heavily trafficked areas and also where heated sub-floors are to be installed, as its 25mm thick-bed is usually sufficient to accommodate most types of wire & pipe-based heating systems.

SURFACE PREPARATION

The receiving floor surface must be hard, sound and free from grease, dust, floor polish and loose deleterious materials such as worn surface coatings, plaster. Any adhesive & coatings residues must first be tested to determine if they are "moisture sensitive" and then removed if necessary. Prior to laying **PALACE SMOOTH-BASE** as a surface to receive moisture sensitive floor coverings, the base concrete or sand/cement screed should be tested to confirm that it has had sufficient time to dry out to reach a consistent moisture reading of <75% R.H. (< 3.0% actual residual moisture content - carbide test) - tested as per BS 8203:2017 - Annex B. Where it is not known whether an effective structural DPM is in place, or where the above moisture test results show values in excess of 75% R.H. (or > 3.0% residual moisture content), then a liquid damp-proof membrane such as moisture suppressant **PALACE 1-COAT DPM** should be applied onto the prepared concrete. Where the floor is relatively uneven and provided there is no risk of hydrostatic pressure, **PALACE SMOOTH-BASE** floor leveller is moisture tolerant & can be laid directly to the sub-floor giving an easier surface to be over-coated with **PALACE 1-COAT DPM** to ensure protection for any subsequently over-laid "moisture sensitive" floor coverings. **PALACE SMOOTH-BASE** can be laid directly to the sub-floor and the flat level finish it provides then gives an easier surface to be over-coated with **PALACE 1-COAT DPM** to ensure protection for subsequently applied moisture sensitive floor coverings.

SPECIFIC SUBSTRATE PREPARATION

Although **PALACE SMOOTH-BASE** will bond readily to most solid sub-floors, the application of a primer on highly porous surfaces will reduce the risk of pin holes in the level finish whilst also maximising flow time & adhesion strength.

PALACE MULTI-PRIME diluted 1 to 3 can be used for this purpose, also where Anhydrite Screed (Calcium Sulphate) based floors are being over-laid, the application of two coats of **PALACE MULTI-PRIME** will be necessary to form a barrier & avoid any adverse interaction between the cement-based **PALACE SMOOTH-BASE** and the gypsum-based screed beneath it.

(Consult **PALACE MULTI-PRIME** tech data sheet).

ANHYDRITE [CALCIUM SULPHATE] BASED SCREEDS

Mechanically remove any loose material / laitance to give a clean, dry, solid dust-free surface prior to the application of **PALACE MULTI-PRIME** (first coat diluted 1 to 1 then second coat neat) to ensure a protective barrier is established. Drying times of this class of screed can be at a rate of 1mm screed depth per day (2mm per day if > 40mm deep). Anhydrite screeds which already incorporate pre-installed underfloor heating systems can use this heat source to reduce drying times, along with de-humidifiers operating in the room, which will also speed up the drying process. The relative humidity (%RH) test result in the subfloor should be less than 75% RH, (residual moisture content < 0.5%) however where this cannot be achieved within a manageable period of time the application of a damp-proof membrane (**1-COAT DPM**) is recommended to be applied after the **PALACE MULTI-PRIME** barrier preparation step (above) has already been completed.

FLOORING GRADE ASPHALT

New asphalt must be left for a minimum of 7 days and degreased to remove surface bloom. If cracks are visible repair will be necessary to give a strong subfloor. Check the floor is in good condition and that there are no signs of de-bonding and/or hollowness.

SAND/CEMENT SCREEDS

Recently installed sand/cement screeds must be allowed a minimum of 4 weeks to dry sufficiently. Ensure new sand/cement screed is confirmed dry via consistent moisture measurements across the whole surface. Sand/cement screeds must have a moisture reading of less than 75% relative humidity (RH) before any levelling compound can be applied over it. Remove any laitance from the surface mechanically and ensure that any other contaminants are cleared from the surface ideally by a vacuum cleaner. On porous or worn screeds, prime the surface with **PALACE MULTI-PRIME** diluted as 1 part to 3 parts water and then allow to dry.



EN ISO 14001



EMS 85788

EN ISO 9001



FM 01010

EN ISO 18001



OHS 596309

PALACE CHEMICALS LTD

SPEKE HALL INDUSTRIAL ESTATE

SPEKE LIVERPOOL L24 1YA

TEL: 0151 486 6101 - FAX: 0151 448 1982

E-MAIL: SALES@PALACECHEMICALS.CO.UK

SMOOTH-BASE

2 Part Fast Setting Floor Levelling Compound



NEW CONCRETE

Floor slabs must be allowed at least 6 weeks drying time equivalent to 1 day per mm up to an overall depth of 50mm and 2 days per mm for anything above 50mm. Ensure new concrete is tested via consistent moisture readings across the whole surface whereby a reading of less than 75% relative humidity (RH) is advised before work can commence. Remove any laitance from the surface mechanically and ensure that oil, grease curing agents and any other friable materials are removed ideally by vacuum. If the surface is relatively porous prime the surface with **PALACE MULTI-PRIME** diluted as 1 part to 3 parts water and allow to dry.

DENSE OR POWER FLOATED CONCRETE

Ensure the surface has been allowed 7 days to cure. Ensure new concrete is confirmed dry via consistent moisture readings across the whole surface. Concrete screeds must have a reading of less than 75% relative humidity (RH) before proceeding to over-lay. Remove any laitance or friable top finish from the surface mechanically whilst scoring & etching the surface before taking up all remaining dust residues by vacuum.

PLYWOOD OVERLAY

Check that plywood overlay is flooring grade compliant to EN 314:2 Class 3 Exterior before applying **PALACE SMOOTH-BASE** and ensure that new or existing boards are pre-conditioned to the environment in which they will be used. Plywood sheets must be a thickness of 15mm minimum & screwed to substrate at 150mm centres. Ensure there is sufficient ventilation beneath substrate and that the plywood has been fitted competently and will take the weight of the leveller, adhesive and the final anticipated in-use loading without any risk or sign of deflection. It should be dry and free of any contaminants, loose dust or dirt. Existing plywood showing signs of wear or abrasion will require priming with **PALACE MULTI-PRIME** diluted 3-parts water, to 1-part **PALACE MULTI-PRIME**. New, uncontaminated plywood does not require priming prior to over-laying with **PALACE SMOOTH-BASE**.

FLOORS COATED WITH A SURFACE DAMP PROOF MEMBRANE

Damp-Proof Membrane coatings such as **PALACE 1-COAT DPM** should be treated as non-absorbent substrates and applications of **PALACE SMOOTH-BASE** should be completed within 12 hours of the DPM being first applied (Consult **PALACE MULTI-PRIME** technical data sheet). Sand blinding the freshly applied DPM will assist with improving

the bond to over-laid screeds. Where a **PALACE 1-COAT DPM** has been in place for longer than 24 hours, then the surface should be mildly abraded to ensure a good key is formed with the subsequently applied levelling compound.

UNDERFLOOR HEATING SYSTEMS

Heating wires must be securely fixed to a sound consistent substrate such as cement backer board. **PALACE SMOOTH-BASE** should then be applied at a thickness which allows for a clearance above the elements of no less than 5mm depth of levelling compound to ensure a smooth even finish will be attained prior to laying the finished decorative or resilient surface. Always allow at least three weeks before the heating elements are switched on at the lowest setting and then only raise the temperature progressively by 2°C per day over the following week.

MIXING

PALACE SMOOTH-BASE floor leveller should be added to clean water in a clean container and mixed thoroughly with a power whisk fitted to an electric drill to give a smooth, lump-free, flowable & pourable levelling compound which should be applied to the intended area without delay. The recommended mixing proportions are **4.5 litres of liquid additive per 20kg sack**. The material should be mixed for a minimum of 2 minutes after the last of the powder is added ensuring the mixing head is below the surface to minimise air entrapment. Allow the mix to stand for 1 minute after which time the free-flowing screed will be ready for application directly onto the prepared substrate.

APPLICATION METHOD

Pour the freshly mixed levelling compound onto the prepared surface and use a straight edged steel float to ensure the compound is evenly spread into all areas and corners. **PALACE SMOOTH-BASE** will readily flow across a flat surface and smooth out trowel marks for about 20 to 30 minutes before it begins to firm up. Do not allow the mixed material to stand for a prolonged period in the bucket as this will shorten its flow & open time. The use of a spiked roller will assist in removing air holes and achieving a consistent smooth surface finish, particularly between adjacent mixes of product. Only spike roll whilst the product is still in its fluid state, usually for about 10 minutes after initial application. The maximum total application thickness for this product is up to a depth of 80mm.



EN ISO 14001



EMS 85788

EN ISO 9001



FM 01010

EN ISO 18001



OHS 596309

PALACE CHEMICALS LTD

SPEKE HALL INDUSTRIAL ESTATE

SPEKE LIVERPOOL L24 1YA

TEL: 0151 486 6101 - FAX: 0151 448 1982

E-MAIL: SALES@PALACECHEMICALS.CO.UK

SMOOTH-BASE

2 Part Fast Setting Floor Levelling Compound



APPLICATION METHOD (CONTINUED)

In ideal conditions (20°C), it will remain flowable for 20 minutes and then, after about 3 hours, the laid screed will have reached final set sufficient to take light foot traffic. All tools & mixing equipment should be washed immediately after use with clean running water before the material reaches its initial setting time.

PRECAUTIONS

Both units have a storage life of not less than 12 months if stored in dry, un-opened and frost-free conditions at temperatures between 5°C & 30°C.

Note: this product is not suitable for directly over-laying soft flexible vinyl, rubber, cork or any similar moisture sensitive very soft floor coatings & unstable adhesive residues. Do not mix or apply this product if site & surface temperatures are below 5°C or greater than 35°C or likely to be less than 5°C for the first 24 hours.

COVERAGE

PALACE SMOOTH-BASE, when applied over a smooth even non-absorbent floor at an average 3mm depth will cover at a rate of one 20kg bag per 5.0M². Adequate ventilation is essential during the drying process and any draughts or exposure to excessive heat sources must be eliminated to ensure consistent drying.

CURING

PALACE SMOOTH-BASE when applied at 20°C & 65% RH under ideal site conditions will allow for a working time of up to 20 minutes and then reach initial set after 1 hour. Under the above conditions it will rapidly cure and harden to allow light foot traffic after 3 hours and will be ready to receive tiles after 4 hours and soft flooring after 24 hours.

STORAGE AND PACKAGING

PALACE SMOOTH-BASE is supplied in 20kg moisture resistant bags with a bottle of latex liquid additive and both should have a storage life of not less than 12 months if stored in dry, un-opened and frost-free conditions.

HEALTH AND SAFETY

Always ensure that appropriate PPE is worn when mixing & applying this product to ensure protection from airborne dust and skin contact with the mixed liquid product. Wash hands after use and launder stained clothing. Do not consume food when working with this material and keep children & animals away from any possible risk of contact. A complete PALACE material safety data sheet is available on request or online at www.palacechemicals.co.uk

QUALITY AND ENVIRONMENT

All Palace Chemicals products are manufactured under a BSI accredited ISO 9001:2015 Quality Management System, along with an ISO 14001 Environmental Management system continually working to reduce our carbon footprint.

TECHNICAL ADVISORY SERVICE

Should more specific technical information be required, contact the Palace Technical helpline on: **0151 486 6101**.

For a Technical Specification and quantity requirements, visit our 'TilingSpecifier' on the Palace website at: <http://www.palacechemicals.co.uk>

TECHNICAL DATA	
SPECIFICATION	BS EN 13813:2002
CLASSIFICATION	CT-C35-F10
WORKING TIME @ 20°C	20- 30 min
FLOW PROPERTIES (USING A 30MM X 50MM FLOW RING)	>130mm
INITIAL SET	60 mins
FOOT TRAFFIC	90 mins
READY FOR FLOOR COVERINGS	4 Hours for a 3mm layer
COMPRESSIVE STRENGTHS (N/MM ² - TO BS EN 13892-2)	1 day >9.0 7 days >25.0 28 days >35.0
FLEXURAL STRENGTHS (N/MM ² - TO BS EN 13892-2)	1 day >2.0 7 days >7.0 28 days >10.0
COVERAGE 20KG OF SMOOTH BASE POWDER MIXED WITH 5 LITRES OF SMOOTH BASE LATEX WILL COVER AS FOLLOWS	5.0M ² at 3mm depth 2.5M ² at 6mm depth 1.0M ² at 10mm depth
APPLICATION TEMPS	>5°C and <35°C
PACK SIZES	20kg powder with 5 litres of liquid latex additive



EN ISO 14001



EMS 85788

EN ISO 9001



FM 01010

EN ISO 18001



OHS 596309

PALACE CHEMICALS LTD

SPEKE HALL INDUSTRIAL ESTATE

SPEKE LIVERPOOL L24 1YA

TEL: 0151 486 6101 - FAX: 0151 448 1982

E-MAIL: SALES@PALACECHEMICALS.CO.UK

SMOOTH-BASE

2 Part Fast Setting Floor Levelling Compound



APPROVED RECEIVING SURFACES
✓ Sand / Cement screeds
✓ Tile backer boards
✓ Existing ceramic & stone tiles
✓ Existing Vinyl tiles
✓ Steel Decking
✓ Anhydrite screeds *
✓ Concrete Slabs
✓ Plywood Overlay
✓ Under-floor heating
✓ Flooring grade asphalt
✓ Epoxy DPM
✓ Moisture stable adhesives

* Must be securely fixed & primed/sealed

DISCLAIMER

The information provided by this Technical data sheet is given in good faith and is to the best of our current knowledge true and accurate, however it is given without guarantee, as conditions of use and workmanship involved are both beyond our control. All information supplied is subject to the company's terms and conditions of sale, copies of which are available on request.



EN ISO 14001



EMS 85788

EN ISO 9001



FM 01010

EN ISO 18001



OHS 596309

PALACE CHEMICALS LTD

SPEKE HALL INDUSTRIAL ESTATE

SPEKE LIVERPOOL L24 1YA

TEL: 0151 486 6101 – FAX: 0151 448 1982

E-MAIL: SALES@PALACECHEMICALS.CO.UK